

Department of biology





Department of biology

((Biophysics))

Stage 1

<u>LAB 2</u>

THE SIMPLE PENDULUM

By

M.CS Mohammad Ali Abo-Jazzra







The purpose of the experiment :-

Study simple harmonic motion of the simple pendulum and to measure the acceleration of gravity g.


Theory:-

The simple pendulum offers a method of measuring the constant

acceleration due to gravity very precisely.

A simple pendulum is defined, ideally, as a particle suspended by a weightless string. Practically it consists of a small body, usually a sphere, suspended by a string whose mass is negligible in comparison with that of the sphere and whose length is very much greater than the radius of the sphere.

Under these conditions, the mass of the system may be considered as concentrated at a point -namely, the center of the sphere, and the problem may be handled by considering the transitional motion of the suspended body, commonly called "bob," along a circular arc.

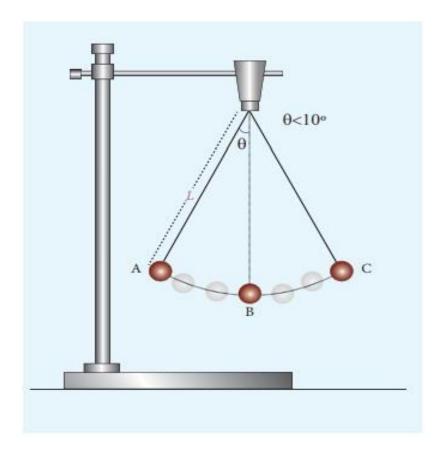



Department of biology



Consider the diagram of a simple pendulum

shown in Figure 1. The displacement, arc length x, for small angle θ that the structure

 $x = A \sin \omega t$

The period of vibration is the time required for it to go through one cycle (i.e., $= 2\pi/\omega$.

$$T = 2\pi \sqrt{\frac{L}{g}}$$

Note finally that the constant A in Equation (1) is the amplitude of the motion which measures how far the bob swings away from the vertical, the maximum value of the displacement. This is conveniently expressed as an angle in degrees.

Work steps :-

The period T of a simple pendulum (measured in seconds) is given by the formula:

T = time for 10 oscillations / 10 oscillations(2)

using equation (1) to solve for "g", L is the length of the pendulum (measured in meters) and g is the acceleration due to gravity (measured in meters/sec). Now with a bit of algebraic rearranging, we may solve Eq(1).for the acceleration due to gravity g. (You should derive this result on your own).

$$g = 4 \pi^2 L/T$$
(3)

1) Measure the length of the pendulum to the middle of the pendulum



Department of biology



bob. Record the length of the pendulum in the table below .

2) With the help of a lab partner, set the pendulum in motion until it completes 10 to and fro oscillations, taking care to record this time .Then the period T for one oscillation is just the number recorded divided by 10using (eq. 2) .

3) You will make a total of 5 measurements for g using two different masses at four different values for the length L.

4) Draw the relationship between (T2) on the y-axis and (L) on the x-axis.

Trial	Length (L) [meters]	Time of oscillations (t1)	Time of oscillations (t2)	Total time of oscillations (t) [seconds]	Number of Oscill. (N)	T ² [sec] ²	$g = 4\pi^2 L$ / _T 2
1							
2							$g = \frac{4\pi^2}{slope}$
3							
4							
5							

